

# Alcolizer LE5 Alcohol Tester



Law enforcement grade with GPS & bluetooth connectivity



Fast, sophisticated & accurate testing with colour transreflective LCD screen



Verified to Australian Standard AS 3547:2019 (certification type 2)



Module exchange system for fast, easy calibration



Multi-function capability standard & passive testing



AlcoCONNECT™ Live and OST App compatible



**Alcolizer**  
LE5 alcohol tester

Alcolizer Technology  
1300 789 908  
sales@alcolizer.com

## Trusted by law enforcement, federal agencies and industrial customers for fast, sophisticated and accurate alcohol testing.

### Device Features

- Highly responsive, platinum electrochemical fuel cell
- Multi-function capability for Mouthpiece & Passive testing
- Simplified records feature for easier reading of results
- Warning Beacon flashing screen in dark conditions
- Designed, developed to AS3547:2019 Certification Type 2
- GPS performance using multi constellation GNSS
- Fast Pressure Activated Passive response
- Patented Anti-Blow-Back Passive Cup
- Transreflective colour LCD screen
- Audible tones for Passive Testing

### Technical Specifications

INSTRUMENT APPLICATION	▶ Commercial & Industry
SENSOR TYPE	▶ Law enforcement grade, highly responsive platinum electrochemical fuel cell
STANDARD	▶ Designed to Australian Standards AS 3547:2019
BrAC RANGE	▶ 0.000 – 0.462g/210L (BrAC)
TEST TIME	▶ Within 3-5secs for 0.100% BrAC result
RECOVERY TIME	▶ Instant for 0.000 BrAC readings (retained on-screen for 10 seconds)
DISPLAY	▶ Transreflective colour graphics LCD screen
MOUTHPIECE	▶ Standard or non-return valve saliva trap
CALIBRATION	▶ 12 month module exchange system for on-site calibration
OPERATING TEMPERATURE	▶ Range -5°C to 55°C
POWER SUPPLY	▶ Rechargeable Li-Ion battery system
WEIGHT	▶ 326g (including battery)
DIMENSIONS	▶ 196mm H x 66mm W x 43mm D

### Why Alcolizer LE5?



#### LAW ENFORCEMENT GRADE

Highly responsive electrochemical fuel cell delivering fast and accurate results for sophisticated, law enforcement and heavy industrial use applications.



#### ROBUST & DURABLE

Designed and made for demanding conditions, delivering outstanding performance in rugged and remote environments.



#### MULTI-FUNCTION TESTING

Performs both standard mouthpiece and passive tests to suit any workplace Drug and Alcohol testing program.

Pressure-Activated Passive Testing and Fast-Passive Testing. Pressure-Activated is automatically activated by breath pressure provided by a test subject. Fast-Passive is a new, faster response time for Passive Testing.



#### CONNECTED FOR MAXIMUM CAPABILITY

Multiple connectivity options include, bluetooth printing and AlcoCONNECT™ Toolbox for data download. Sync stored results to AlcoCONNECT™ the complete solution to access live analysed results from any device.



#### SERVICE AND SUPPORT

Supported by a global network of service providers and factory trained professional technicians, all Alcolizer LE5 alcohol sample modules have an extended warranty under AlcoCARE™.



#### CALIBRATION

All Alcolizer LE5 Reader modules have a 12 month calibration service requirement with ongoing support provided by professional technicians.

# OnSite Testing

alcohol & drug solutions

## The OnSite Testing Alcohol and Drug Solutions App

The ideal tool for Safety and Business Managers seeking real-time test results. Enable with AlcoCONNECT™ Live Data Management system for the total solution.



# AlcoCONNECT

data management

The ideal tool for Safety and Business Managers seeking real-time mobile enhanced test results.

## MOBILISE YOUR DRUG & ALCOHOL TESTING PROGRAM


- ✓ Maximise compliance with photo evidence and GPS
- ✓ Fast and Easy to input test events and donor details
- ✓ Electronic data Security and reduced errors
- ✓ Supervised or unsupervised testing
- ✓ Synchronise to AlcoConnect Live



## Calibration Services

### RETURN YOUR EXPIRED MODULES VIA OUR SIMPLE MODULE EXCHANGE PROGRAM

Alcolizer Technology provides calibration services for Druglizer LE5 via a patented Module Exchange Program.

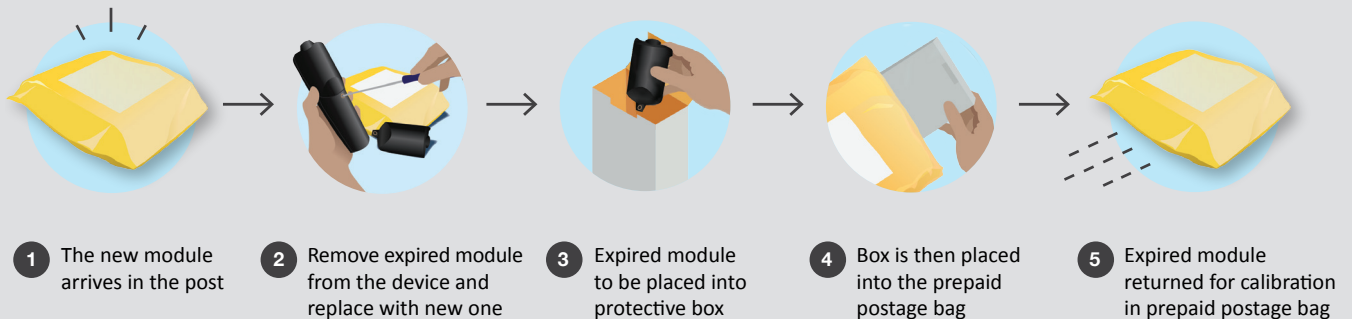

For all your Alcohol & Drug Testing Requirements  
 Ph 1300 789 908  
 sales@alcolizer.com  
 www.alcolizer.com



# Alcolizer

technology

TRUSTED ALWAYS